
 The repair and reconditioning work must only be performed by properly trained personnel.

 The legal provisions relating to waste handling and disposal must be observed.




## 1. Detach the watch strap.

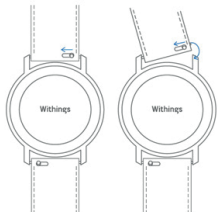


1. Unlock the the quick release spring bar.
2. Remove the strap.


## 2. Place the watch case in a case holding vise.

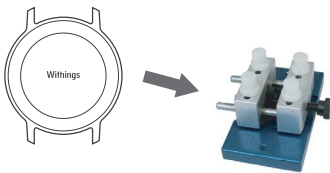

## 3. With a case opener tool, open the watch back case by working the tool into the groove located at the top .

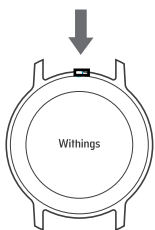


## 4. Replace the CR2025 battery.

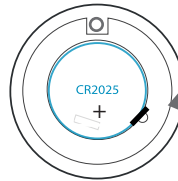

Make sure the holder is properly holding the battery.


## 5. Check the new battery by pressing the reset button. The watch will vibrate to confirm the battery is properly installed.

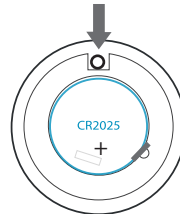

Use plastic tweezers to press the button.

## 6. Check that the O-ring gasket attached to the back case is not damaged. Replace the gasket if damaged. See the image below for gasket dimensions.

## 7. Close the watch with a press, reattach the strap to the case.

 The pusher on the case back must be positioned in regards of the reset button. A click can be heard when the watch is properly closed.

## Parts

### Battery

CR2025 coin cell


For optimal use of your Withings watch, we recommend that you replace the original battery by a non rechargeable CR2025 coin cell from Panasonic or Renata.

### O-ring gasket

24mm internal diameter, 0.7mm torus diameter  
or 25mm internal diameter, 0.5mm torus diameter



Be careful not to twist the gasket before or while placing it around the back case.

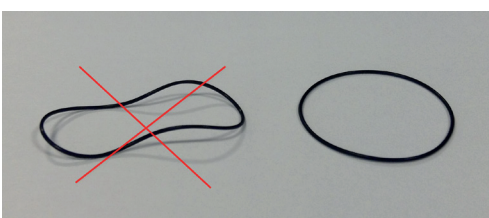

## Water resistance

Withings Activité watches are 5 ATM water-resistant. Battery replacement does not require a water-resistance test provided the operation is carried out by trained personnel and the o-ring gasket is checked.

Please confirm the right gasket reference by checking the type of back case with the image below.

